


AWS

ME-5KG

User Manual

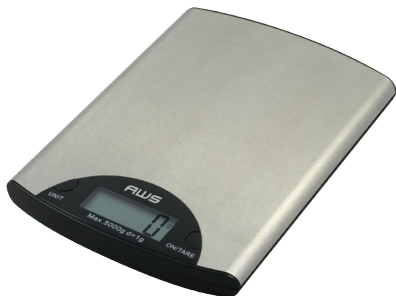

ME-5KG (5000g x 1g)



ME-5KG


Thank you for purchasing the American Weigh ME-5KG digital kitchen scale. Please read all operating instructions carefully before use. Scales are precision measuring devices and should always be handled with proper care. To ensure years of reliable service, keep these simple tips in mind:

- Do not exceed the scale's maximum capacity. Overloading your scale can permanently damage it!
- Avoid exposure to extreme heat or cold. Scales perform best at normal room temperature. If temperatures have changed dramatically, calibration and adjustment may be necessary.
- Allow your scale to warm up for 30-60 seconds before performing calibration and adjustment(if available).
- Store your scale in a clean, dry location. Dust, dirt, and moisture can accumulate on the weighing sensors and electronics causing inaccuracy or malfunction.
- Avoid using your scale in close proximity to strong radio wave emitting devices such as computers, cash registers, and cordless phones.
- Always weigh on a flat and level surface, free from vibrations and drafts. The corner of a room is usually the most stable.
- Gently apply all items to be weighed. Do not drop items onto the weighing platform.
- Avoid dropping your scale. The warranty does not cover damage due to rough treatment or overload.
- Check the batteries first if you are having any trouble with your scale. This simple step can remedy most scale issues.
- Do not disassemble your scale. This product contains no user serviceable parts.

I. Part List


1. Scale
2. CR2032 Batteries (x1)

II. Key Description

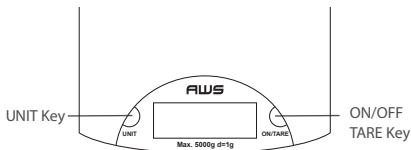

III. Battery Installation

 1. Before using the scale for the first time, check the battery compartment and remove any plastic insulation strips or packaging that may be in place to prevent battery drainage during shipping/storage.
2. If you are replacing the batteries, make sure the positive and negative contacts are properly aligned.



Insert Battery
Positive Side Up

IV. Operation

1. Place the scale on a flat, level surface and tap the **ON/TARE** key to turn the scale on.
2. Once the start-up process completes and the scale goes to zero you are ready to weigh.
3. Place the quantity to be weighed onto the weighing platform.
4. Wait a couple seconds for the display to stabilize before taking a weight reading.
5. To turn the scale off, press and hold the **ON/TARE** key.

V. Changing the Unit of Measure

1. Press the **UNIT** key to change the scales displayed unit of measure.
2. If the scale is turned off then back on, it will default to the last unit used.
 - **ME-5KG Units:** g (gram) ► oz (ounce) ► lb (pound) ► ml (milliliter)

VI. Using the Tare Feature

You can use this scale's tare feature to subtract the weight of an empty container or vessel for net weight determination.

NOTE: The weight of the container will subtract from the available capacity.

1. With the scale ON, place the empty container or vessel on the weighing platform.
2. Press the **ON/TARE** key once. The display will then reset to zero. If the container is removed, it's weight will be displayed as a negative number.
3. You may now fill the container with the quantity to be weighed. The display will show the net weight of

the contents.

4. To return to normal weight display (gross weight), remove any items from the weighing platform and press the **ON/TARE** key again to re-zero the scale.

VII. Troubleshooting

- **Problem:** Scale will not turn on
- **Solution:** Check the batteries
- **Problem:** Displayed weight fluctuates randomly
- **Solution:** Make sure your workspace is stable and free of any air currents or vibration

VIII. Error Codes

1. **OUTZ** - Zero range has shifted. Perform calibration adjustment. If the problem persists, the load cell may be permanently damaged due to overloading.
2. **EEEE** - Maximum capacity exceeded. Remove the extra weight to avoid damaging the load cell.
3. **UNST** - Scale is unstable. Use the scale in a more stable position.

IX. Specifications

	ME-5KG
Max. Capacity	5000g
Readability	1g
Power	1 x CR2032
Dimensions	5.5 x 7.8 x 0.8"
Platform Dimensions	5.5 x 7.8"
Warranty	10 Year Limited Warranty

X. Capacity/Readability Charts

ME-5KG
5000g x 1g
176.4oz x 0.2oz
11lb x 0.002lb
5000ml x 1ml